 
 
 
 
 
 
 
 


User's Manual



M100



CONTENTS

SAFETY INFORMATION	4
SPECIFICATIONS	6
PACKAGE CONTENTS	8
INSTALL	9
ADJUSTING THE PROJECTED IMAGE	11
EYE SAFETY WARNINGS	12
TROUBLESHOOTING	13

SAFETY INFORMATION

- 1) Read these instructions.
- 2) Keep these instructions.
- 3) Heed all warnings.
- 4) Follow all instructions.
- 5) Do not use this apparatus near water.
- 6) Clean only with dry cloth.
- 7) Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- 8) Do not install near any heat sources such as radiators, heat registers, Stoves, or other apparatus (including amplifiers) that produce heat.
- 9) Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- 10) Protect the Dower cord from being walked on or pinched particularly at plugs. Convenience receptacles, and the point where they exit from the apparatus.
- 11) Only use attachments/accessories specified by the manufacturer.
- 12) Unplug this apparatus during lightning storms or when unused for long periods of time.

 
SAFETY INFORMATION

- 13) Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
- 14) Operate the unit on 200~240 / 100~240V AC, 50/60 Hz to DC 5V 2A power adaptor.
- 15) Should any liquid or solid object fall into the cabinet, unplug the unit and have it checked by qualified personnel before operating it further.
- 16) Unplug the unit from the wall outlet or set the power switch to OFF position if it is not to be used for several days.
- 17) To disconnect the cord, pull it out by the plug. Never pull the cord itself.
- 18) The wall outlet should be near the unit and easily accessible.
- 19) The unit is not disconnected from the AC power source (mains) as long as it is connected to the wall outlet and the power switch is set to the OFF position.
- 20) Do not look into the lens while the lamp is on.
- 21) Do not place your hand or objects near the ventilation holes. The air coming out is hot.
- 22) Avoid using an extension cord with a low voltage limit, as it may cause short-circuiting and physical injury.

SPECIFICATIONS

Parts

1. Power indicator
2. Power ON/OFF
3. Volume Dial
4. AV in Jack
5. DC Power IN
6. Ventilation holes(left)
7. Lens
8. Speaker
9. Ventilation holes(right)
10. Tripod Jack
11. Air intake

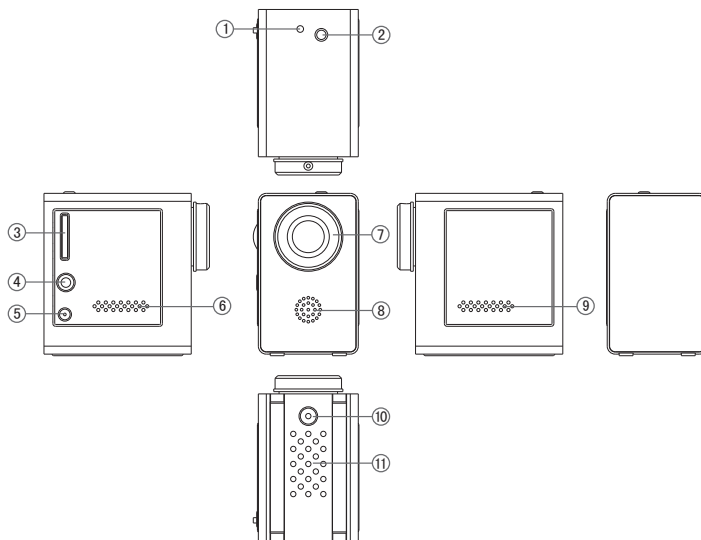

SPECIFICATIONS

Method of Projector: Front

Type of Projector: LCoS

Panel size: 0.44 inch

Resolution: 640x480 Pixel (VGA)

Brightness: 10 ANSI Lumens

Lamp source: High power LED (3W)

Lamp life time: over 20,000 hrs

Screen size: 15-48inch

Contract Ratio: 200:1

Focus: Manual

Speaker: 0.6 Watters

 
Video/Audio Terminal: 3.5mm Mini AV cable

Power source: DC 5V, 2A


Dimension: 62.3x38.2x61.7 mm

PACKAGE CONTENTS

①



②

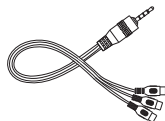 

③



 
④




1. DC Adapter
2. Video Cable
3. Manual
4. Tripod

INSTALL

Connect the Power charger
(During charging the Power indicator lights red.)


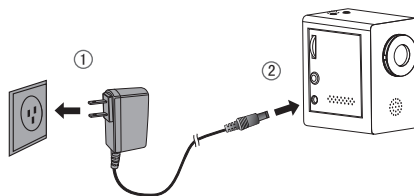


Connect the AV input source.

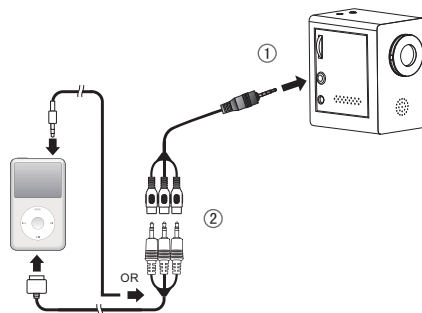 


INSTALL

  
1. Attach a standard tripod to the screw hole on the projector.
2. Adjust the tripod to a suitable height.

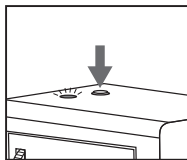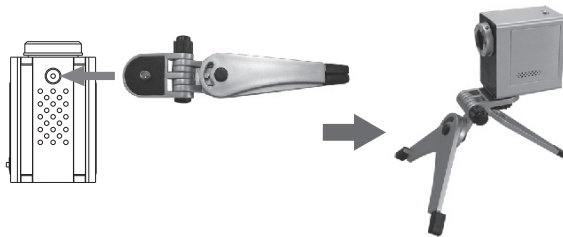

 Press the power button three seconds to start.
(The Power indicator lights orange)

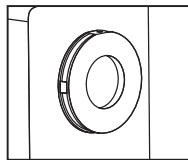


Screw the lens to focus the image

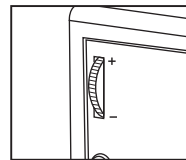 

Adjust the volume wheel for sound

 ADJUSTING THE PROJECTED IMAGE

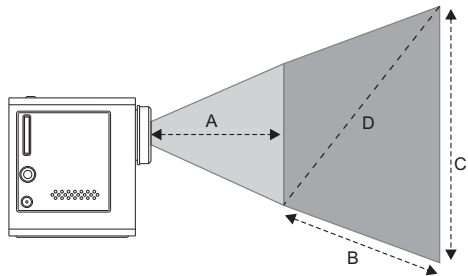

Rotate the Lens until the image is clear.

Projection Distance - A (cm)	60	80	100	120	150	200
Screen Size - Width - B (cm)	27	36	45	54	65	96
Screen Size - Height - C (cm)	22	27	35	41	48	69
Screen Diagonal - D (inch)	14	18	22	27	31	45

EYE SAFETY WARNINGS



1. Avoid staring/facing directly into the projector beam at all times. Keep your back to the beam as much as possible.
2. A stick or laser pointer is recommended to avoid the need for the user to enter the beam.
3. When projector is used in a classroom, adequately supervise students when they are asked to point out something on the screen.
4. In order to minimize power, use room blinds to reduce ambient light levels.

DISPOSAL OF OLD ELECTRICAL & ELECTRONIC EQUIPMENT



This symbol found on your product or on its packaging, indicates that this product should not be treated as household waste when you wish to dispose of it. Instead, it should be handed over to an applicable collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences to the environment and human health, which could otherwise be caused by inappropriate disposal of this product. The recycling of materials will help to conserve natural resources.

This symbol is only valid in the European Union. If you wish to discard this product, please contact your local authorities or dealer and ask for the correct method of disposal.

TROUBLESHOOTING

If you experience a problem with your projector, please refer to the following information. If a problem persists, please contact your local reseller or service center.









Image Problems









NO IMAGE APPEARS ON-SCREEN

- Ensure the cables/charger/battery are correctly and securely connected.
- Ensure the pins of connectors are not crooked or broken.
- Make sure the projector is switched on.

IMAGE IS OUT OF FOCUS

                - Adjust the Focus Dial.
- Make sure the projection screen is between the required distance 7.9 to 103.8 inches (60 to 200cm) from the projector.





Issue: V04 200910
Made in China

