

MN798/M8
USER
MANUAL

This is a new generation media player. Supporting MP1,MP2,MP3,WMV,ASF or WAV files. Its perfect tone in high reliability with refined exterior design brings you an ultra performance .

Overview

Refined exterior design

Unique design fits for hand

Multi file for mat support

This player recognizing MP1,MP2,MP3,WMV,ASF or WAV files.

Firmware upgrade available

You can download upgrade software from website enhancing player's function .

FM stereo radio

Powerful automatic or manual tuning capability .Save up to 40 channels (20 channels in each system)

Telephone book

Build-in convenience .portable address book

e-Documents

You can download test files into player and read it and time as you like.

Driver free USB memory

Manage your files in USB memory without specified software .no need drives in WIN2000 or furthers.

'secret space '

You can separate part of the memory encrypting and hiding in using program provided .where data can't be seen or written by others.

Record /Repeat

Voice can be recorded and saved in WAV or ACT format .Phase /contrast repeat available.

Equalizer

Normal, Pop ,Rock ,Classic ,Soft ,Jazz, Bass .

Backlight colors

This player provides 7 backlight colors

Play modes

Normal, Single repeat, play catalog, repeat catalog ,repeat all, shuffle, lyric

Timing turning off

The player provides sleep and battery saving mode, more convenience for you !

Complete dynamical menu

Visualized dynamical menu with text instructions make you easy control.

Declarations

Welcome to choose our product, please read this manual carefully.

Functions and performance may change without prior notice

If any difference between produce and this manual, please visit our website .

Know your player

Display

Battery Level

The player shows capacity in 9 levels

Battery is full on 3.8V, As time goes on, capacity indication will monish .

Indicator shows blank when battery almost ran out, you should charge your battery at that time .

Please switch on the player before charge. This player can't be charged in case of power off.

Please switch off power when not using the player .

Basic Functions

Access to Menus

Press Mode to access menus .

Scrolling

Scroll music, menus

List of Menus

To access different menu functions from main menu.

Volume Adjust

Push VOL to access volume adjust, press next/last to increase or decrease volume .

Switch on /off

Press and hold **Play** to switch on when the player is off

Pres and hold **Play** to switch off when the player is on .

Play & pause, exit from submenu .

On Music mode, press play to paly music

When playing music, Press play to pauce, press and hold to stop playing .

Start /stop recording

On recording mode, press play to stop

Keys processing

Keys Functions Definition

1. play: power on/ off, play, pause, stop
2. Mode : Entry main menu or from current menu
3. VOL: Volume Adjust
4. Next :next, FF, volume increase
5. Last: Previous, Rev, Volume decrease
6. USB:USB outlet
7. ON/OFF: Power switch
8. Earphone : Standard earphone outlet

Key processing Definition

Keys processing includes 4 actions :Press, press and Hold, push, hold .If not mentioned, all actions are press .

Press : press a key and valid immediately

Press and Hold : press a key and hold it at least 1.2s this action valid only once

Push : push a key, and valid when released

Hold : events occur in such frequency then the key is holding such as forward and reverse .

Play Music

Simple actions

1. Put earphone plug into earphone outlet .

2. Press and hold **Play** to switch the play on , then entry Music and press **Play** to play music

3. Select a music :**Last** :Previous music ,**next** : next music

Volume adjust :Press **VOL** to change Volume ,Press **next** to increase ,**last** to decrease .

Equalizer Mode

1. When playing music
2. Press **Mode** to entry play submenu
3. Push **Next** choosing Equalizer Mode
4. Press **mode** to entry "Equalizer Mode" submenu

.Detail of each equalizer (EQ)

Natural	Rock	Soft	Jazz
Pop	Classical	DBB	

.Push next to select an EQ and press Mode to confirm

.Synchronous Lyric Display

The player supports lyric files with *.LRC suffix ,and displays synchronously

How to use lyric files ?

Please make sure the lyric has the same name to the music

For example :

Music file :My heart will go on .mp3

Lyric file :My Heart will go on .lrc

How to know if lyric available ?

If lyric matched ,a symbol will be shown on bottom-right in music mode

1. When marched lyric available
2. Press and hold Mode to entry lyric interface
3. Lyric displays
4. Press Mode return to music mode

Voice recording

Please make sure the battery has enough capacity before making record.

Each fold can save up to 99 voice recording files

. Recording on 'Record mode '

1. Entry main menu
2. Push next scroll to record mode
3. Push Mode to select record Mod, Screen will display as below
4. press play to start recording

1) Voice will be recorded in current fold which set through 'Record stop /main fold '

2) If displayed "memory full",it means no space to save new record files ,please delete other files to release memory space

3) If 'fold full 'shown , it means there are 99 record files in this fold ,Please choose another ones

4)the Player only responses to play and A-B when record processing

Select Record type

1. When in the interface of 'record stop '
2. Press Mode to entry record submenu
3. push next scrolling into 'record type 'submenu the presses mode to select it

Fine record	Wav file ,fine quality
Long-time recur	Act file normal quality
Fine voice control	Wav file (recording controlled by

	voice ,pause when mute)
Long-time voice control	act file (recording controlled by voice, pause when mute)

4. Press Next to choose appropriate type and press Mode to select it
5. press play to start recording

Play recorded files

1. entry main menu
 2. push next to choose 'play mode '
 3. Push Mode to entry playing interface
 4. Press play again to play the file
 5. Choose play again t play the file
- Last: Select previous file
Next: Select the next file

Convert ACT Files into WAV for mat

The ACT file which produced by this player by this player can be converted into WAV format by using software provided

1. Run "sound convertser"progress .Clock "Open "button
2. Select the ACT files you would like to convert
3. Click "CONVERT"button,the program will start converting

Using FM radio

1. Entry main menu
2. push next scrolling 'FM model '
3. Push Model to entry
4. Auto tuning
 - Hold Last/next 2second to start the channel
 - Search in 100 KHz interval upwards or downwards
 - To stop tuning ,push Last/next
5. Manual tuning
 - Push Last: Downward 100 KHz
6. Save current channel:
 - Push Mode to entry FM submenu
 - Press Mode again to saved channel
7. Listing to a saved channel :
 - You can press Play to choose a saved channel
8. Volume control
 - VOL+: Increase volume
 - VOL-: Decrease volume

Settings

Entry settings

You can set System performance here ,options may vary in different firmware version

1. Entry main menu
2. push Next scrolling into 'settings'
3. Press mode to entry

Options introduction

(Recording time)	Setting date and time when saving recorded file
(Screensaver)	Set the screensaver for play/stop

	status
(Display settings)	Setting screen brightness
(Language)	Choosing different languages
(Timing switch off)	Setting count down time in minutes ,the player will shut off when time out
(Repeat setting)	Setting repeat status
(PC Mode)	Options for 'secret space '
(Memory Status)	Check memory space and usage status
(Firmware status)	Version of player's firmware
(Firmware upgrade)	Use for upgrade firmware
(Exit)	Exit from setting iteface

List of menus:

○ 'recording time 'setting

1. System setting interface
2. Press Mode to entry 'recording time' interface recording time .
3. Push VOL+ setting from years .While setting, year on twinkling .
4. Push Next the value will increase (last on opposite)
5. After setting, press Mode to exit.

○ "Screensaver "setting

- 1.Press Mode entry screensaver setting
- 2.Push Next for choosing (last for previous)
- 3.After setting, press Mode to exit

○ language setting

4. Press Mode entry language setting
- 5.push Next for choosing (last for previous)
- 6.After setting ,press Mode to next .

○ Turning off setting

Please note:

You can set time in second on "battery saving "mode ,allow the player shut down automatically when player become stop and idle for the period you have set .this function id void if the time set to 0.

You can set time in minute on 'sleep mode ',allow the player shut down automatically when the player become idle(regardless current status) for the period you have set .It sleep mode valid only once after setting .you have to set again if you want to use it next time .

○ 'repeat settings'

Please consult into 'sound setting'

Note: in 'Manual Mode 'you should set point manually .

In 'Automatic Mode 'the player can identify sentence automatically when on A-B repeat .(This function is designed for repeat sentence in language studies)

○ 'PC connection 'setting

Please consult into 'sound setting '

Some operation systems (Windows 2k SP4 or prior) may not recognize a USB disk with two symbols ,therefore , you have to choose an active disk here when using 'Secret space 'function only the active disk can be found in PC.

○ 'Memory status'

You can check total memory space and the percentage of usage

O 'firmware version '

You can find the player's firmware's version .

O 'Firmware upgrade '

Use for upgrade player's firmware

Tips :Press play can exit current menu quickly

The function is valid on all other menus

Reading documents

1. On main menu ,press next/last choosing e_Document.
2. press Mode to entry corresponding submenu
3. Press Next or last choosing the document you want to read
Then press play to read it

Note: If you are set in 'manual play ' you must scroll text via next or last , texts can be scrolled automatically under 'Auto play 'set.

Browsing pictures

This function is only available for JPEG format.

1. On main menu ,press Next/Last choosing Browsing pictures
2. Press mode to entry corresponding submenu
3. press Next or last choosing the document you want to press play to play it .

Using USB Disk

The player is also a standard USB disk , Supported by Windows 98(drivers needed), windows 2k or above (no need for drivers),Mac OS 10.3,red power supply ,can be used without battery when connected to PC. To entry , when on 'waiting mode ' press Mode return to main menu and choose the operation you need .

This player supports Suspend Mode .

When connected to PC, The player works on the three modes below :

Upgrade your player

You can use Pc software to maintain or upgrade player's firmware.

1. Entry main menu
2. Push next scrolling into 'settings'
3. Push Mode to entry 'settings 'submenu
4. push next scrolling into 'Firmware upgrade 'and push Mode to entry .
5. Connect player to Pc
6. Running upgrade tools Mp3 player upgrade ,then click '**choose** 'new firmware

7. Select a firmware file (can be found on CDROM provided or download from internet)
8. Click 'start Upgrade ', the upgrade will on process.
9. While upgrade successful , the player will display like this .
10. While upgrade successful , the player will display like

Firmware upgrade is to improve player's performance ,you can still use it normally without doing upgrade process

The upgrade software can't work for other player and vice verse .

Other settings

choose other fold (stop submenu)

You can classify files into several folders that ease to manage them (folders should be created on PC), The player can indentify 9 folders in root.

Please note: you can set folders independently in Music/recorder /play mode .

Delete file (stop submenu)

You delete correspond files/channels in each Music/play/FM modes

'Delete all' will delete all files in current folder of current mode .I.e. Choose 'Delete all' in Music mode will delete all music files , recorder files will not be affected .

On FM mode, all saved channel will be removed .

Please safely removed player and unplug USB cable after delete files on PC.

Otherwise some files will not be removed.

- **Play mode (Play submenu)**

You can choose different play mode (i.e. repeat shuffle) when playing music or recorded files.

The first option on play submenu is 'play mode '

- **Repeat**

Normal	Playing music files in sequence until the end of folder
Repeat One	Repeat single music file
Folder	Play all music files in folder
Repeat Folder	Repeat all music files in folder
Repeat All	Repeat all music files

- Shuffle

Random	Play music files in folder randomly
--------	-------------------------------------

- Intro

Intro	Play the 10s of each music files in sequence
-------	--

- Play speed (play submenu)

You can choose different play speed and not affect to sound. (only valid to MP3 files)

1. While playing music
2. push **Mode** to entry play submenu
3. Push **Next** scrolling to "Play speed" option
4. Push **Mode** to entry
5. Push **Next** for faster, **Last** for slower

Note: Play speed will apply to all music file

- Repeat mode (Play submenu)

Press -B to entry or entry from play submenu:

- A-B repeat

1. when play music or recorder
2. push **Mode** to entry play submenu
3. push **Next** scrolling into "Repeat Mode" option
4. Push **Mode** to entry repeat mode "A" of symbol flashes, waiting for starter A
5. Push Next to select "A" , "B" of symbol flashes, waiting ender B
6. Push Next to select B symbol fixed and starting repeat between A-B, while playing you can push Last to reset A point

Note: In repeat mode, you can press VOL+ or VOL- to adjust playing speed

- Karaoke Mode (No such function in playing mode)
- Repeat times (Play submenu)
Please consult into "Backlight time setting". Repeat time determines the times of play A-B repeat until exit.
- Repeat interval (Play submenu)
Please consult into (Backlight time setting). Repeat interval determines the time period between previous repeat (in seconds).
- New Function Recommends!
! About secret space

Some MP3 user may worry about divulging secret. They do not want others to find private information contained, therefore these data have to be removed before lend their own MP3 to others. It makes some trouble.

However, this problem has totally solved by "Secret Space" technique

You can use provided software to divide the whole USB disk into two parts, and encrypt one of them. You can move your privacy into the encrypted part. They will be protected by password.

To active "Secret Space"

1. Connect your players to PC
2. Run MP3 player disk tool which can be found in provided CD Rom
3. Click "Allocation and Encrypt" card, allocate appropriate space and set username and password, then click start.
4. After space allocation,
5. Click OK to restart
6. After restarted you will find two disks (only one disk can be seen on window 2000 SP4 or prior). Click the encrypted disk (the second one), you will find three files, two are hidden, one is executable.
7. Running executable files "RdiskDecrypt.exe" and input username and password. If all are correct, disk will be opened, and files can be copied into.
8. you must enter username and password each time access encrypted disk.

Warning: divide one disk into parts will remove all data, and so does combine process.

Warning: please remember username and password. If you forget it, you can only making combine processing and you will loss all encrypted data.